# newsteotracker

Everything about the transport of your goods



# MONITORING MEASURING SECURING

The Newsteo Tracker 16g range measures and records the conditions of carriage of goods until 2 years.

All taken measures are time-stamped to know when an abnormal event took place.

# Continuous monitoring of :

- 3-axis shock(+/- 6g or +/-16g)
- Shock energy
- Shock duration
- Temperature
- Humidity
- Dew point
- Luminosity
- Free fall height
- GPS Position
- Ground speed
- Direction of movement





After having configured and activated the Newsteo Tracker, just fix it in the container, truck, box ... before it leaves. The Newsteo Tracker continuously measures various parameters and stores corresponding measures. Upon arrival, the measurements are wirelessly downloaded on PC, through the package of the good.

#### Medical

- Temperature control of medical stocks
- Temperature control for the transport of organs
- Shock and temperature monitoring for the transport of vaccine

#### Insurance

Liability search in case of damage



# **APPLICATIONS**

### Transport of fragile goods

- Control of transport conditions of art devices
- Control of transport conditions of measuring instruments, electronic equipments, laboratory equipments...

#### Food

- Control of the cold chain and dew point temperature
- Temperature control in distribution and transportation of meals



With Newsteo Tracker, it is possible to determine the source of transport problems.

And in response, to limit breakage and losses.



The NEWSTEO
TRP55 enables
to display the GPS
positions of each
shock on Google
maps with all the
details of speed and
direction of
movement.

#### **ASSETS**

#### Reliable and Efficient

- Complete and time-stamped history
- of transport conditions
- Exclusive: measure of the height of free fall
- Detailed information on the shock:
   acceleration, duration and energy
- Wireless data restitution, without needing to open the package, the container
- Guarantee of non opening of the packages (light sensor)
- LEDs which indicate if an alert has occurred, without having to download measurements.

#### **Compact and Robust**

- Miniature and easy to fix
- No cables or connectors
- Easily removable

#### Easy to use

- Great battery life
- Large storage capacity
- Batteries easy to supply, replaceable by the user

#### Accurate and details

- Records of routes
- Geolocation of shocks
- All the details of each incident : ground speed, force and energy of shock, timestamp

## **TECHNICAL FEATURES**

	Newsteo TRE35	Newsteo TRE37	Newsteo TRE38	Newsteo TRP55
Operating temperature	-40°C to +60°C	-40°C to +60°C	-40°C to +60°C	-40°C to +60°C
Temperature	-40°C to +85°C ±0,3°C from -30°C to 70°C	-40°C to +85°C ±0,2°C from 0°C to 60°C	-40°C to +85°C ±0,2°C from 0°C to 60°C	-40°C to +85°C ±0,3°C from -30°C to 70°C
Humidity	Х	0 à 100% rH ± 1.8% [080% HR]	0 à 100% rH ± 1.8% [080% HR]	Х
Light	х	X	0 220 Lux ± 30 Lux	х
Shocks (3 axis)	-16G à +16g; Accuracy : ±0,5g; Resolution / 14 bits - 3,9 mg; Bandwidth : 1600 Hz			
Protection Level	IP54	IP54	IP54	IP67
Battery	1 Thionyl Lithium Battery, type A - Compatible alkaline battery type AA / LR6  3 Alkalin LR6/ 3 Thionyl Lithium type AA			
Autonomy @ 25°C	3 Months to 2 years depending on the model and used batteries			
Memory capacity	129 000 measurements blocks, one shock using 2 blocks (corresponding to 1 record campaign of 2 years, with one temperature measure every 15 minutes and 29 000 shock records).			

Measurement Frequency Can be set from one measure every minute to one every 4 hours. Data historic files Secured report compliant EXCEL or PDF. Radio Frequencies ISM 868 MHz (Europe).

Dimensions

TRE: 110 X 56x 26mm TRP: 140 X 96x 33mm

### **EVALUATION KIT**

This kit gives you the opportunity to evaluate the Newsteo Tracker.

The kit is made of:

- The Newsteo Tracker TRE35
- A RF-to-USB key medium-range (¼ wavelenght antenna integrated)
- A CD-ROM containing the installation of the RF Monitor software (the application software of the Logger which enables the restoration of the recorded measures), USB drivers for the RF-to-USB key and the documentation.



