
GAT33 and GAT43 USER GUIDE

Reference : GAT33, GAT43



Table of contents

1	<i>General presentation</i>	- 3 -
2	<i>Inserting your sim card</i>	- 3 -
3	<i>Pairing the gat with RF Monitor</i>	- 4 -
3.1	<i>Launching RF Monitor</i>	- 4 -
3.2	<i>SIM card's configuration</i>	- 4 -
3.3	<i>Database parameters</i>	- 5 -
3.3.1	<i>First option: installation with one GAT</i>	- 5 -
3.3.2	<i>Second option : installation with several GATs or on an existing database.....</i>	- 5 -
3.4	<i>Webmonitor login credentials.....</i>	- 6 -
4	<i>Starting the GAT and the data loggers</i>	- 7 -
5	<i>Connecting to Webmonitor</i>	- 8 -
6	<i>GAT Display.....</i>	- 8 -
7	<i>Red button function.....</i>	- 11 -
8	<i>List of devices compatible with the GAT</i>	- 11 -
9	<i>Support.....</i>	- 12 -
10	<i>Newsteo address.....</i>	- 12 -

1 GENERAL PRESENTATION

The main function of the GAT device is to collect the measurements collected from the wireless data loggers and transmit them through the 3G cellular network.

The display of the GAT allows for easy installation, maintenance and monitoring of the device itself and the data loggers. The GAT can display, monitor and warn when a logger's measurement exceeds the settable +/- threshold.

Optional information such as audible warning sounds and visual alerts can be displayed on the GAT to warn the driver.

The user can connect to the Webmonitor application to access the data and to configure the loggers.

- ✓ The GAT 33 is powered by a 10 to 40 volts car charger - Consumption 30mA
- ✓ The GAT 43 is powered by a 230 volts charger supplied

2 INSERTING YOUR SIM CARD

After opening the device, please insert the SIM card following the steps below :



3 PAIRING THE GAT WITH RF MONITOR

No particular setting is required (please go to step 4) unless

- **You are using your own SIM card**
- **You are using a specific database**

3.1 Launching RFMONITOR











1. Install or update RFMONITOR software with the latest version available from our website
Newsteo > Support > Support center > RF Monitor software – Installation - Update
2. Launch RF Monitor
3. Insert the RF-to-USB key on your PC



4. The GAT, the loggers and the RF-USB key must be on the same radio channel (the GAT and the USB key are factory set on radio channel 1 when delivered)
5. Connect the GAT

On RF Monitor, once the GAT communicates, it will automatically appear on the list of the measuring devices


RFMonitor PREMIUM - 7.10.6.16 - workspace_2018-11-08.xml

Fichier	Affichage	Base de données	Outils	Paramètres	Session	?				
Description	Type de ...	Aler	Confi...	ID	Num. de série	Batterie	Paramètres RF	Transmissio...	mesures	
 GAT33-2_000	GAT33 - 2			1	GAT000020	 ?	 Canal 7 Europe	?	.	
 LOM0025C9	LOM16 - 2			1	LOM0025C9	 ?	 Canal 7 Europe	8min 59s	2 mesure(s) en mémoire tampon	

3.2 SIM card's configuration

Right-click on the line to complete the SIM card's information by selecting the « configuration » tab, then click on « Collector settings »

This information is provided by your SIM card operator (APN, pin code...etc) or you may insert your SIM card on a mobile phone to access this data.

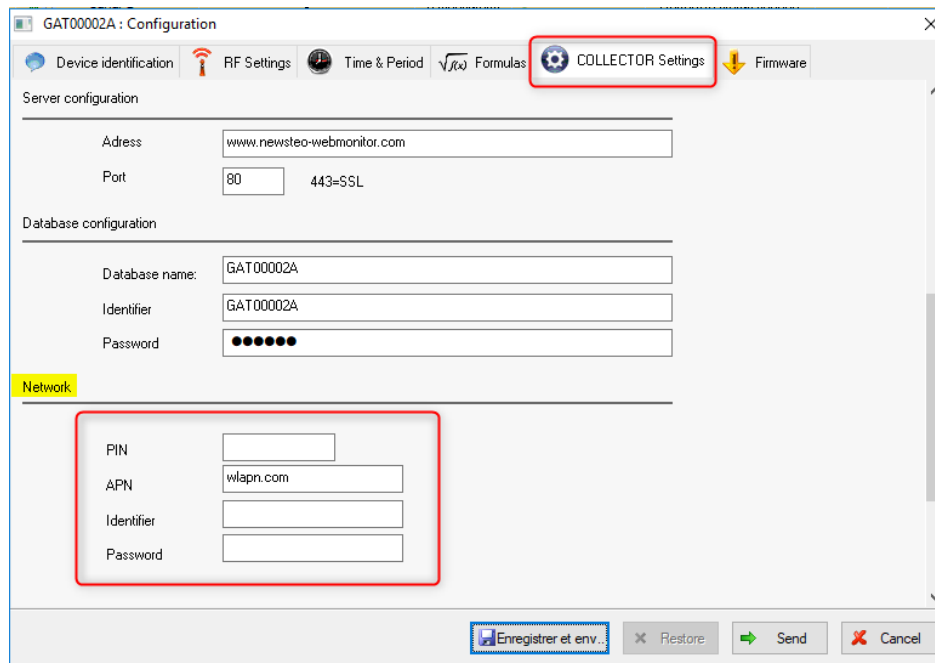

3.3 Database parameters

3.3.1 First option: installation with one GAT

There is no particular setting, the GAT will send the data to its dedicated database. For example, the GAT00002A sends data on the database GAT00002A.

3.3.2 Second option : installation with several GATs or on an existing database

If you are using several GATs and you wish to use an existing database or a single database, you need to configure the GAT so they are directed towards the same database.

Example :

On the example below the GAT00002A is configured to be directed towards the database COL000XXX. (Your login credentials are indicated on the label which has been provided with the GAT, please refer to 3.4)

GAT00002A : Configuration Device

Device identification RF Settings Time & Period Formulas **COLLECTOR Settings** Firmware

Automatic upload ☒

Firmware option

Deactivate buzzer ☐

Server configuration

Adress

Port 443=SSL

Database configuration

Database name:

Identifier **Database**

Password

Network

PIN

APN

Enregistrer et env... Restore Send Cancel

3.4 Webmonitor login credentials

The database credentials are indicated on the label

COL22-3 Configuration

RF Monitor & DB Monitor Config COLLECTEUR

Host: Adresse :

HTTP: Port :

Port: Configuration de la base de données

Non d'utilisateur: Non :

Mot de passe: Identifiant :

Base existante: Mot de passe :

Config WEBMONITOR

http://www.newsteo-webmonitor.com

Non de la base:

Identifiant :

Mot de passe :

4 STARTING THE GAT AND THE DATA LOGGERS

Note : For a first installation we recommend you keep your devices near the GAT when you start the loggers

- ✓ Connect the GAT
- ✓ Place the loggers near the GAT
- ✓ Swipe the magnet on the logger's magnet area
- ✓ The logger activates and transmits its information via radio signal
The logger's serial number will be displayed on the screen
- ✓ Reception of the logger's descriptor
As soon as the GAT receives the logger's descriptor, this descriptor will be displayed on the screen.
The descriptor is a radio frame which contains the logger's technical features




1. Serial number
2. Radio channel (if a securisation is required → S)
3. Logger's name
4. Radio power
5. Firmware version
6. Number of buffered measures (stocked in the logger's buffer memory)
7. Measurement period

- ✓ The GAT will connect to the 3G network and will send the logger's descriptor and measures to the server
- ✓ After a few minutes the logger and its measure will appear on Webmonitor application.


5 CONNECTING TO WEBMONITOR

- Webmonitor application's link : www.newsteo-webmonitor.com
- Enter your credentials

Your login credentials are provided with your devices

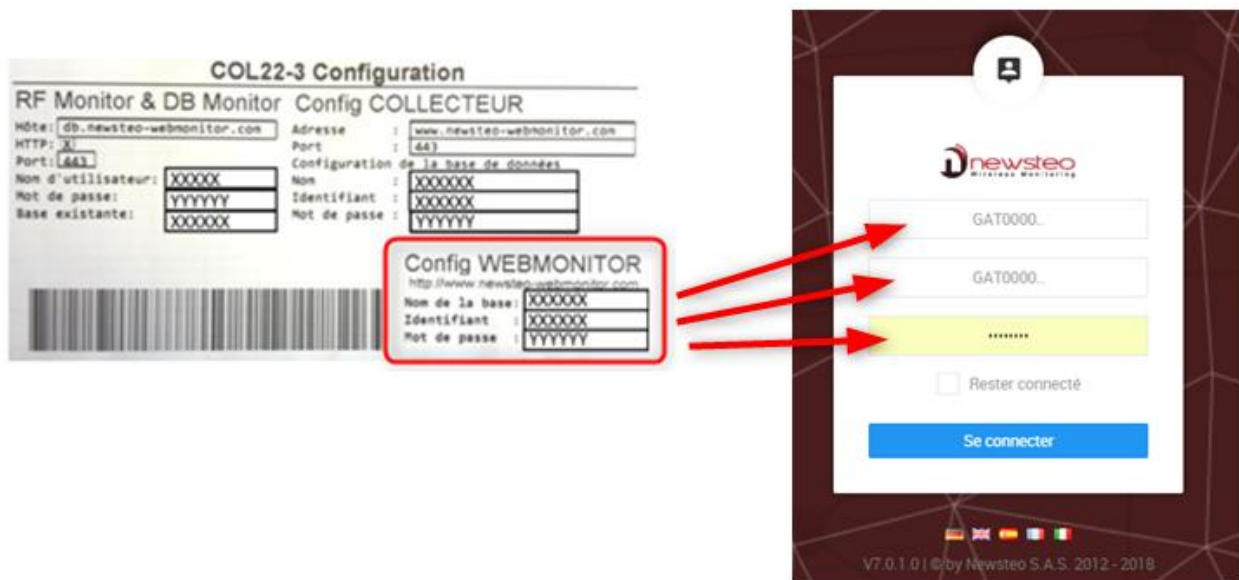

- As soon as the GAT succeeds in connecting itself onto your database, a green widget will appear on Webmonitor dashboard

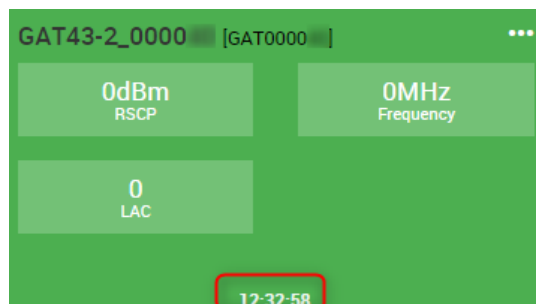

- The GAT's latest connecting time on the database is indicated at the bottom of the widget
- After 5 minutes the loggers detected by the GAT will appear in green on the dashboard.
- If the GAT didn't manage to connect to the server, the widget will remain grey.
The widget of the GAT will turn from green to grey if the GAT hasn't connected to the server for 25 hours.

6 GAT DISPLAY

1) Starting the GAT

Once connected, the GAT will display the following information.



2) Connecting the GAT to the server

A drop-down menu will display the connecting steps of the GAT with the server :

Connecting to server : The GAT is connecting to the server






 

Sending descriptor ok : The GAT is sending its descriptor to the server

Sending presence ok : The GAT is sending its presence signal to the server

Sending measures : 3 : The GAT is sending measures stocked in its buffer memory (*the figure indicates the number of measures*)

The time displayed on the GAT is the one received from the server

 
3) 3G connection status

-  : The 3G connection is successful
- 1 , 2 , 3 , 4  ou 5  : 1 = 3G poor quality connection
5 = 3G good quality connection
-  Connection quality index blinking : The GAT is connecting to the 3G network


4) Radio connection between the GAT and the loggers

-  The radio symbol indicates that the GAT communicates by radio with the loggers

5) Sleep mode/ active mode

-  : The GAT is on stand-by. The GAT stops receiving measures from the loggers, cuts the 3G connection and doesn't connect to the server anymore.

(The sleep mode is activated as soon as the GAT detects a Newsteo Collector or a RF-to USB key. The measures are not sent anymore by the GAT, they are sent to the database via the collector or the USB radio key.

- : The GAT is on active mode

6) GAT status when in function

A drop-down menu is displayed :

OK Everything is ok. The connection to the database is good. No threshold has been reached, the loggers' measures are correct. The date and time are displayed.


< ALERT > One or several loggers have sent measures out of the thresholds which have been preset by the user.

7) Loggers display







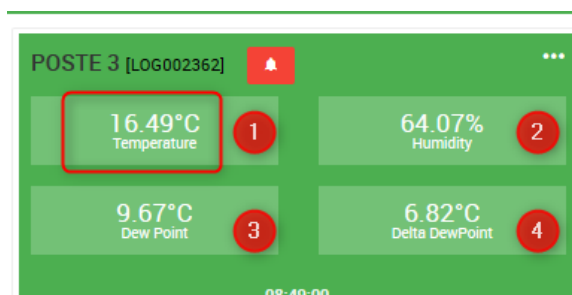

- **1** : Logger's name (*maximum of 7 caracters*)
- **2** : Measure (*one figure after the coma*)
- **3** : Logger's status:
- **OK** : Everything is OK. (*no threshold has been exceeded*)
- **<<** : The logger is on alert. (*threshold has been exceeded*)
- **LOST** : The radio transmission with the logger has been lost
(*The LOST message appears after 59 minutes without receiving any measure*)
- **4** : Number of minutes elapsed since the last measures transmission

Restrictions concerning the display: when the loggers are equipped with several sensors (in the example below 4 sensors) only the measure of the first one is displayed on the GAT.



8) **In case of anomaly with the GAT** error messages will be displayed

- | | |
|---|--|
|  Server KO | The server cannot be reached (please contact our technical support) |
|  No Network | The GAT cannot reach any cellular network (you have lost signal of your cellular service provider) |
|  No SIM | The SIM card hasn't been inserted or hasn't been recognised |
|  PIN Error | PIN number error |
|  DB Error | The link parameters with your database are incorrect (please contact our technical support). |
-
-  **When a problem occurs with the 3G network, the GAT won't upload any measure and won't receive any message from the server.**

7 RED BUTTON FUNCTION

Function of the red button located at the back of the GAT :

- Short press → Allows to manually force the GAT to connect itself to the server
- Prolonged press → Reboot of the GAT

8 LIST OF DEVICES COMPATIBLE WITH THE GAT


- ✓ LOM
- ✓ TSE
- ✓ LOGs
- ✓ LGJ31,32,3D, 71
- ✓ TSP33
- ✓ LGR64

- ✓ LGS39
- ✓ LGC38
- ✓ LGG43
- ✓ LGN05, 35, 45

9 SUPPORT

Please refer to our support dedicated website : <http://support.newsteo.com/>

- For a remote support we use the application TEAMVIEWER

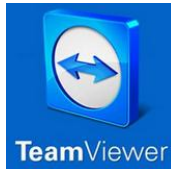

10 NEWSTEO ADDRESS

NEWSTEO S.A.S. - 93 avenue des Sorbiers – ZE Athelia 4- 13600 La Ciotat – France